

SILICONE REMOTE PLEASURE RING



FEATURES:

- Remote control and rechargeable - use alone or with a partner!
- Stretchy and comfortable ring provides superior support for him
- 12 intense functions of vibration, pulsation and escalation
- State-of-the-art memory chip resumes on last function used
- Waterproof enhancer may be used independently of remote
- Perfectly contoured with added waves for ultimate arousal
- Instructions included
- Easy push-button control
- Extended 32.75'/10 m range
- RED certificate included
- USB rechargeable (enhancer and remote) - dual charging cord included



SILICONE



EXTENDED RANGE

REMOTE CONTROL



MATERIALS: Silicone (enhancer) ABS with PU Cote (controller)
ABS with Silver Plating (button, décor)

MEASUREMENTS:

3" x 1.75"/7.5 cm x 4.5 cm (enhancer)

1"/2.5 cm (diameter - ring)

CHARGING INFORMATION:

The enhancer must be activated to pair with the remote. A flashing LED light will indicate the enhancer is activated. Ensure the enhancer is deactivated after each use to preserve battery life. Enhancer will automatically deactivate after 30 minutes of inactivity. LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months. Complete charge time: 1 hour; Run time on high: 50 minutes; Run time on low: 90 minutes.

OPERATING INSTRUCTIONS:

To use enhancer independently:

1. Press and hold the button on the enhancer for 3 seconds to activate; a flashing LED light will indicate the enhancer is activated.
2. Press the button to turn on vibrations.
3. Press the button repeatedly until the desired function is reached.
4. To turn off vibrations and deactivate enhancer, press and hold the button for 3 seconds. The flashing LED will turn off.

To use with remote:

1. Press and hold the button on the enhancer for 3 seconds to activate; a flashing LED light will indicate the enhancer is activated.
2. Using the remote, press the XO button once to turn on vibrations.
3. Press the XO button on the remote repeatedly until the desired function is reached.
4. To turn off vibrations, press and hold the XO button on the remote for 3 seconds.
5. To deactivate, press and hold button on the enhancer for 3 seconds.

This item comes with a memory feature; item will resume on last function used.