

VENUS BUTTERFLY® SILICONE REMOTE VENUS "G"™



FEATURES:

- Petite, full-contact, intimately contoured Silicone butterfly with ridged pleasure probe
- 12 intense functions of vibration, pulsation and escalation
- Waterproof butterfly may be used independently of remote
- State-of-the-art memory chip resumes on last function used
- Easy push-button control
- Extended 32.75'/10 m range
- RED certificate included
- USB rechargeable butterfly and remote – dual charging cord included
- 90-Day Warranty



MATERIALS: Silicone (butterfly) ABS with PU Cote (controller)
ABS with Silver Plating (décor)

MEASUREMENTS:

3" x 1"/7.5 cm x 2.5 cm (shaft)

3.5" x 3"/9 cm x 7.5 cm (butterfly)

CHARGING INFORMATION:

The butterfly must be activated to pair with the remote. A flashing LED light will indicate the butterfly is activated. Ensure the butterfly is deactivated after each use to preserve battery life. Butterfly will automatically deactivate after 30 minutes of inactivity. Product has a memory chip feature and will resume on the last function used. LED light will flash while charging and glow solid when fully charged. Fully charge product before use. Battery life depends on frequency and speed of use. We recommend fully charging your product once every 6 months. Complete charge time: 70 minutes; Run time on high: 55 minutes; Run time on low: 80 minutes.

OPERATING INSTRUCTIONS:

To use butterfly independently:

1. Press and hold the button on the butterfly for 3 seconds to activate; a flashing LED light will indicate the butterfly is activated.
2. Press the button to turn on vibrations.
3. Press the button repeatedly until the desired function is reached.
4. To turn off vibrations and deactivate butterfly, press and hold the button for 3 seconds. The flashing LED will turn off.

To use with remote:

1. Press and hold the button on the butterfly for 3 seconds to activate; a flashing LED light will indicate the butterfly is activated.
2. Using the remote, press the XO button once to turn on vibrations.
3. Press the XO button on the remote repeatedly until the desired function is reached.
4. To turn off vibrations, press and hold the XO button on the remote for 3 seconds.
5. To deactivate, press and hold button on the butterfly for 3 seconds.